

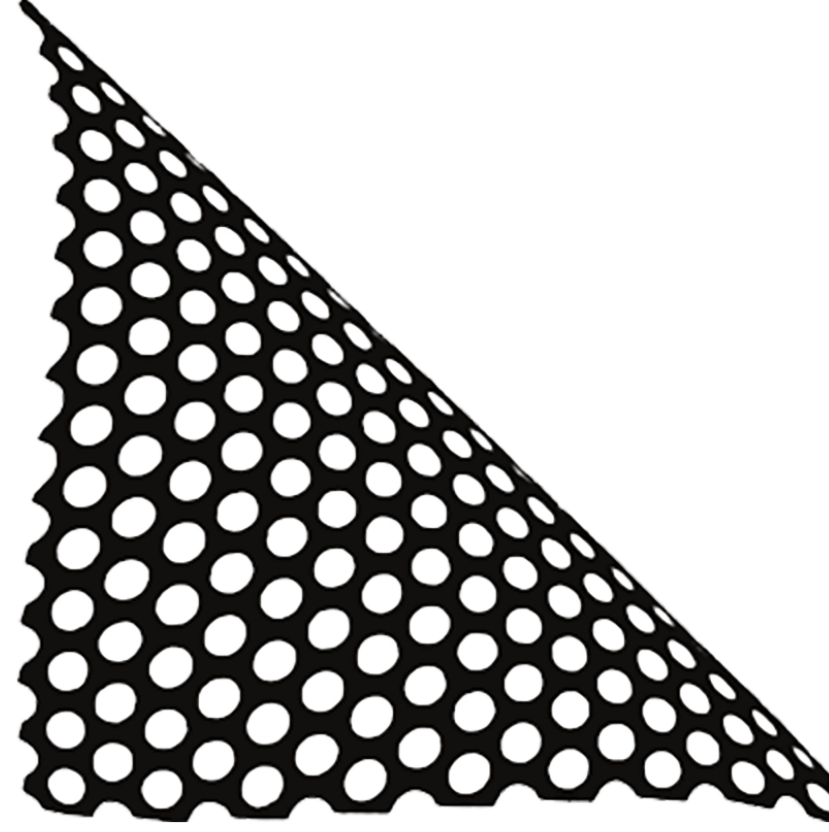


# How to install perforated window film

## step by step

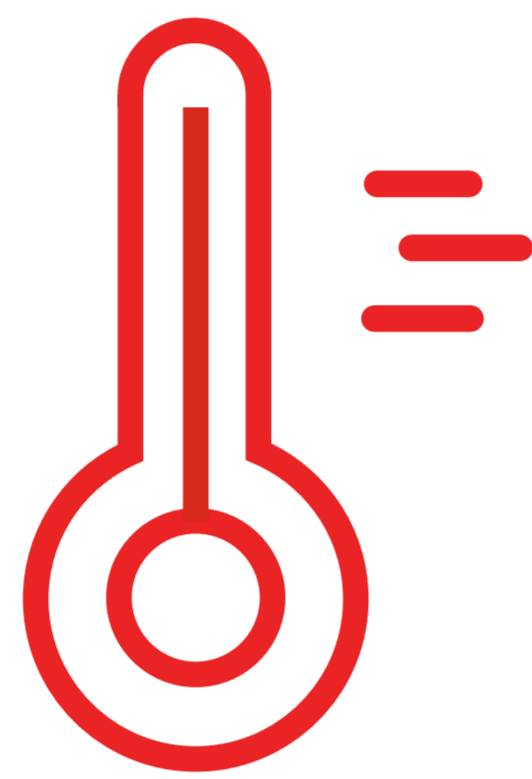

**1** Clean the surface with an alcohol free solution and dry it with a lint-free cloth or an industrial paper towel.

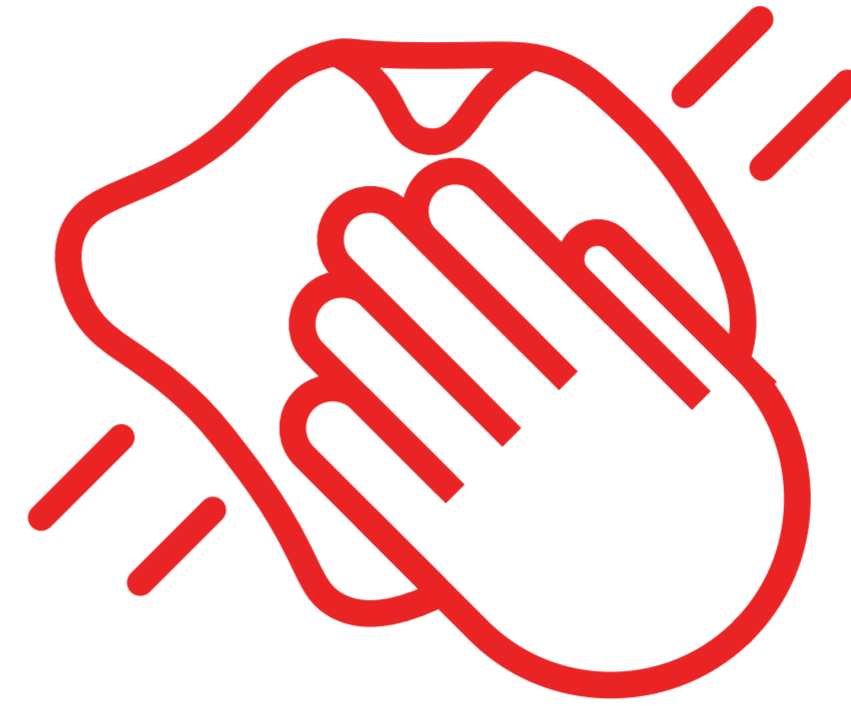


**2** The temperature of the glass must be between 5°C and 32°C. In cold weather, apply the film in late afternoon. In hot weather, apply the film in the early morning.


**3** Lift the upper edge of the liner away from the vinyl and fold a part back according to the size of the graphic.




**4** Align the film and press the upper corners in place.

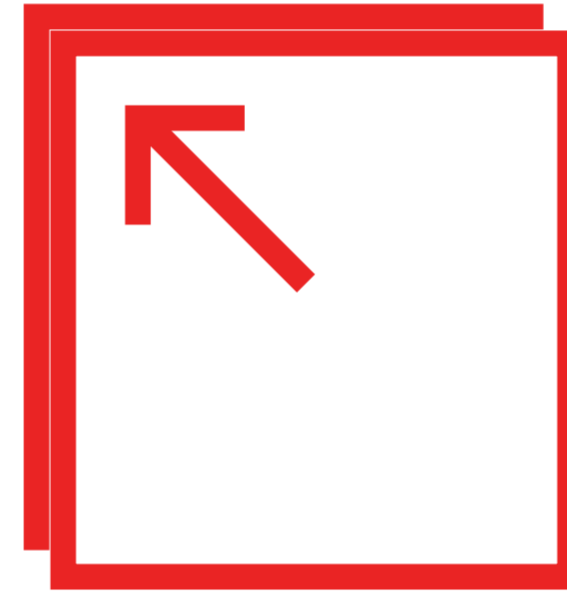

Peel away more of the liner and applying light pressure to the film (top to bottom). Continue until the liner is completely removed.

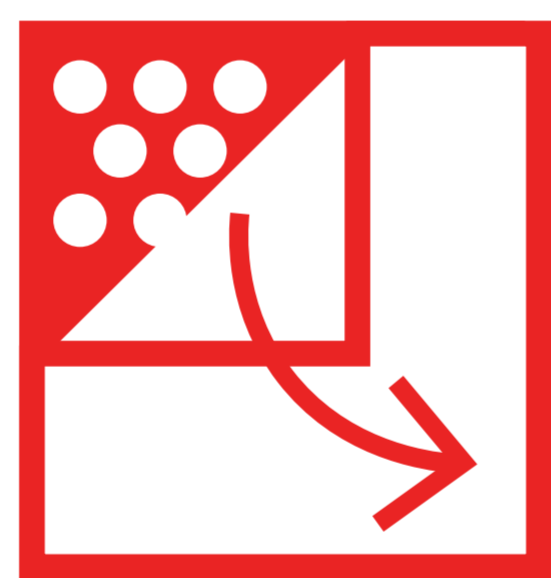



**5** Gently press the film in place by using your fingers or a soft squeegee.

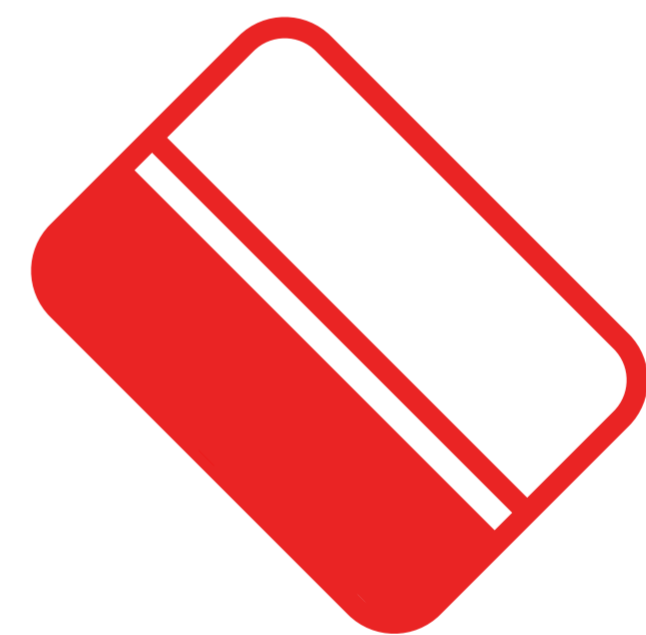

**7** Trim away unneeded portion of the graphics with an utility knife.



**8** In case you have to install more than one panel, carefully align the graphic and the holes.

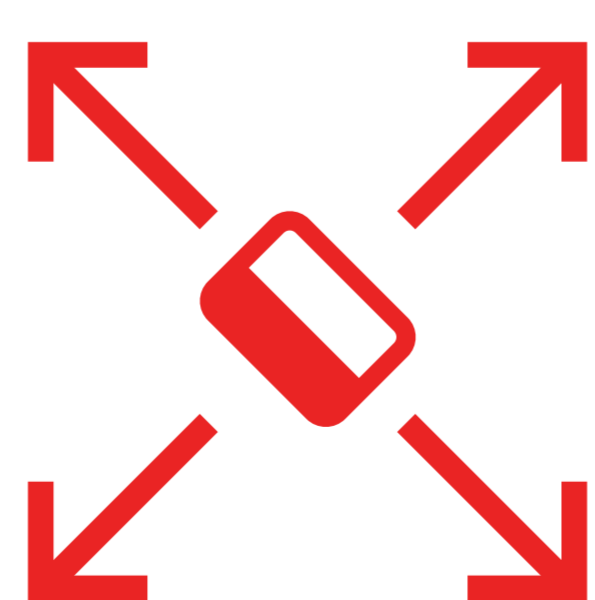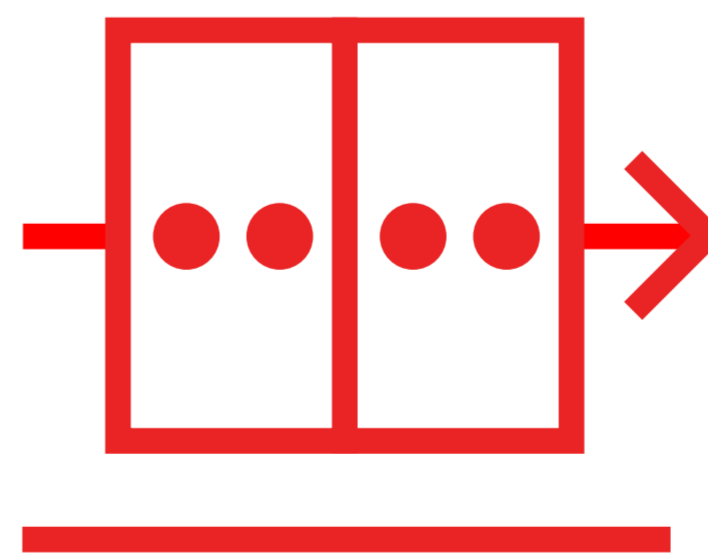

**9** Squeegee the film from the center and work outward.